

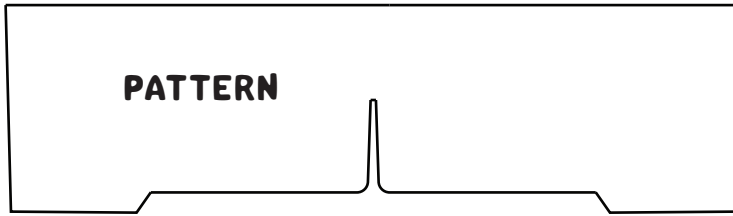


# POINT MOD 2.0 & DRAIN PLUG

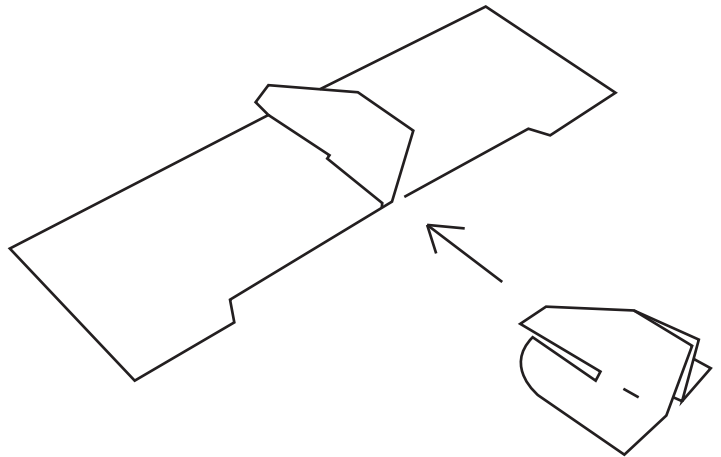


**BALL RETURN  
TRAY INSERT**


**PATTERN**

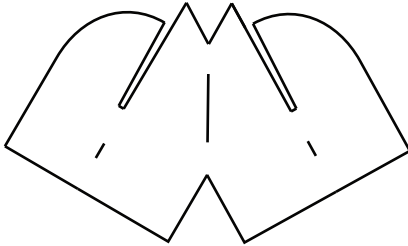

**PATTERN**

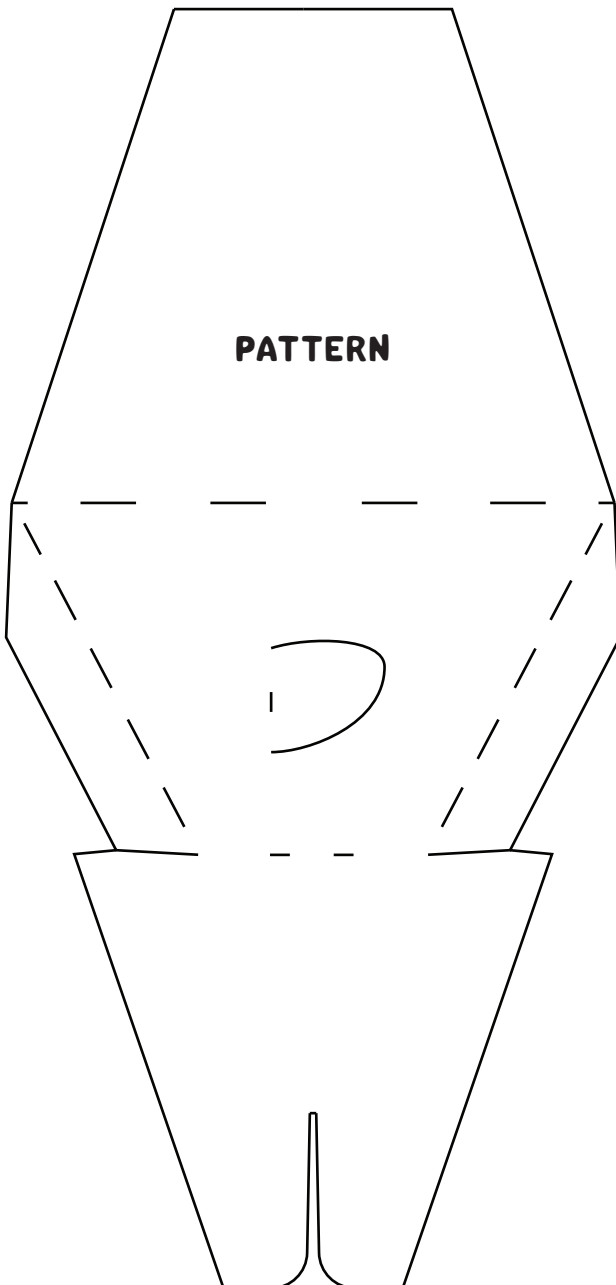

**DRAIN PLUG**

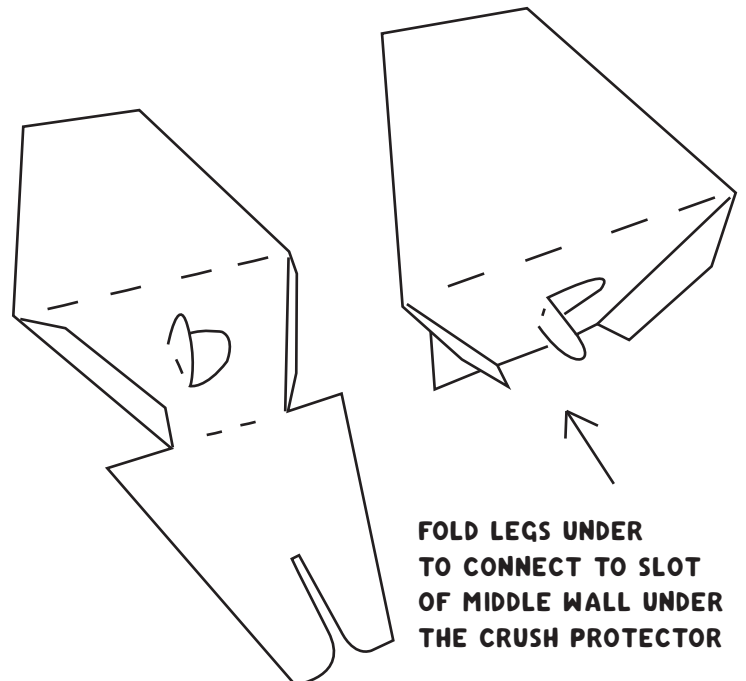

**FOLD LEGS UNDER  
TO CONNECT TO SLOT  
OF MIDDLE WALL UNDER  
THE CRUSH PROTECTOR**